

Operation attention when starting and shutting down the vehicle

Attention when starting

- 1) Before starting the engine, the main power supply must be switched on and the parking handle must be in the braking position.
- 2) Turn the key switch to the first gear to turn on the power, observe the instrument and signal indicator, and check whether the gear shift lever is in neutral position at the same time, automatically reset after release.
- 3) Press down the clutch pedal, turn the key switch and release the key switch immediately after starting the engine.
- 4) After the engine starts, observe the instrument and signal light:
 - ① Oil pressure signal should be shut off.
 - ② The battery charging indicator should be shut off.
 - ③ The engine tachometer should be stable.
 - ④ There should be no fault code on the instrument, if have, please repair.
 - ⑤ When I and II circuit pressure pointer above 0.6 MPa, low pressure alarm lights extinguished, then can the vehicle been started.

Warning

- ★ Each start-up time should be no more than 15 seconds.
- ★ Start-up time intervals should not be less than 30 seconds.
- ★ If it cannot be started for three consecutive times, the cause shall be found out and the fault shall be eliminated.
- ★ Do not step on the accelerator impetuously after the engine starts, the engine must be at an idle speed for 3-5 minutes, if the vehicle been operated at high-speed immediately, which will cause the supercharger burning, a serious damage to the piston, and the engine hit tile.

Attention when shutting down

- 1) The engine should be running at an idle speed for 3-5 minutes before the engine is turned off. The engine can be turned off only when the water temperature of the engine is lowered at a level.
- 2) After the engine is shut off, check for oil or water leakage. If any abnormality is found, repair it.

Warning

★ If the engine does not running at an idle speed and been shut down suddenly , it will shorten the service life of the engine parts and especially the supercharger. Therefore, it is not allowed to shut off the fire except in an emergency.